tivizen iPlug

for iPad, iPhone, iPod touch, and Android™

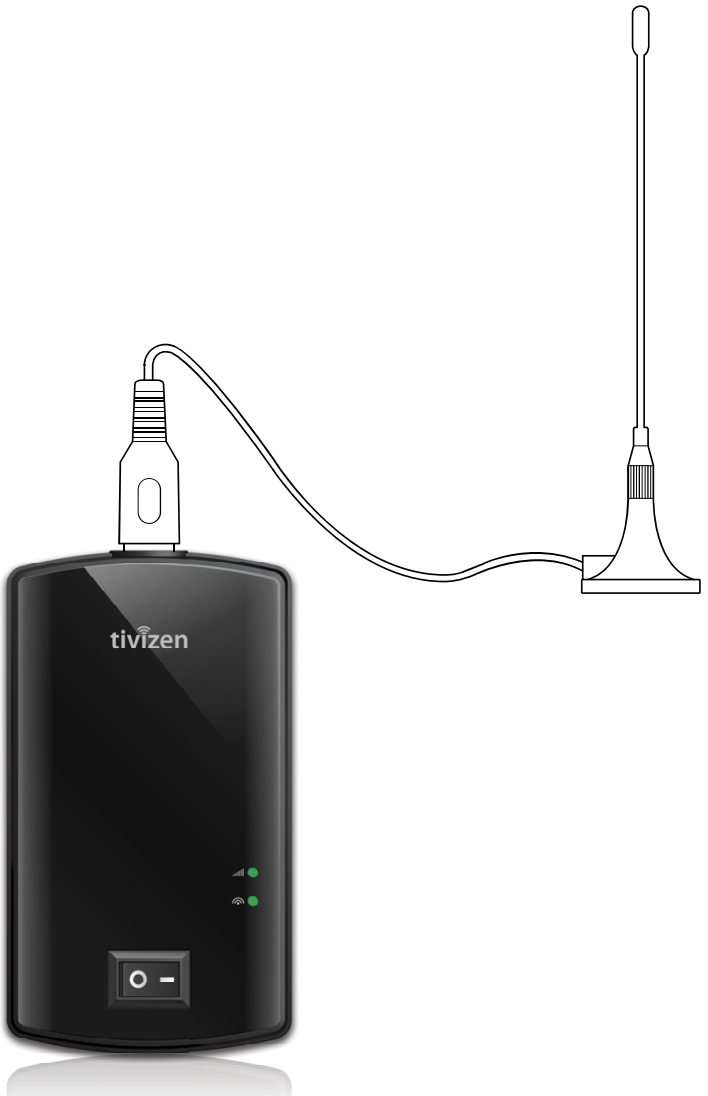

Quick Guide

English > **3**

Warranty > **9**

About tivizen

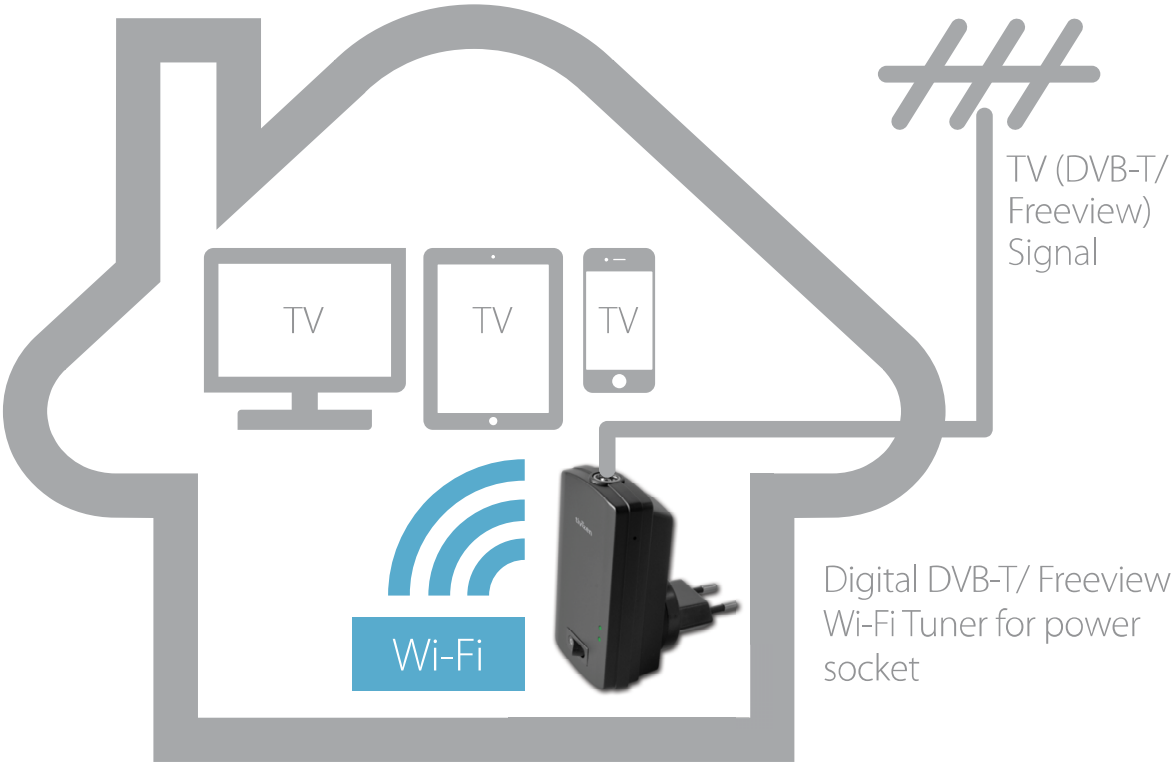

Tivizen iPlug is a fantastic easy to install & use digital free to air DVB-T/Freeview Tuner. Tivizen iPlug does not require internet or 3G connection and delivers brilliant quality Live TV onto your mobile tablet, Smartphone, PC & MAC. Just plug Tivizen iPlug into a power socket, connect your rooft top or rod antenna, download the free of charge app „tivizen DVB-T Wi-Fi“ and connect Tivizen iPlug via wireless connection with your device. Record live television onto your device and use the EPG guide to be up to date what's next on TV. Enjoy cableless digital Live TV anywhere* - at home, on travel, or abroad - all you need is a power socket and a DVB-T/Freeview signal.

tivizen is a mobile live TV receiver for your iPod touch, iPhone, iPad, Android phones/tablets, Mac or PC.

Watching Live TV

- Scan for available Live TV channels
- Watch live TV

Provide Program Guide (EPG) Info

- Search for currently available channels
- Display TV guide information

Record & Play

- Record program currently watching
- Play recorded files and manage the file list

Various Screen View Modes

- Watch in full screen mode with corresponding aspect ratio
- Split view to watch TV and channel list at the same time
- Auto-rotates the screen according to the landscape/portrait orientation (iOS and Android phone&tablet only)

This app may automatically update in order to enhance the performance of your supported model and to support new features without notice.

Depending on the performance of your device or Wi-Fi connection, you may encounter an unstable reception of the TV signal.

When you exit the app, you may encounter a failure to connect to the Internet as your device is still connected to the tivizen for Wi-Fi communications.

What's in the Box

The product package contains the following contents :

▪ Main Unit ▪ Power Plug Adaptor ▪ External Antenna
▪ Quick Guide

Product at a Glance

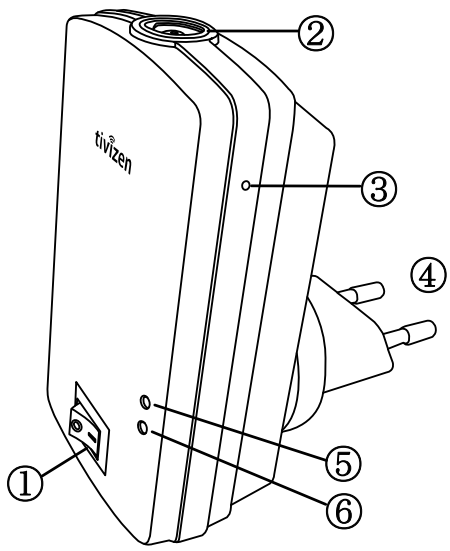

① **POWER Switch**
Turn on or off the tivizen.

② **Antenna Connector**
Connect your roof-top or external antenna.

③ **Reset Hole**
If the tivizen does not work properly, insert a paper clip in this hole and push it gently for 2seconds when the tivizen is powered on. This will factory reset the tivizen.

④ **POWER Plug Adaptor**
Plug the tivizen into wall outlet.

⑤ **Status Indicator**
It informs you of the operational status of the tivizen.

LED Indication	Description
OFF	The system is turned off.
Green (blinking fast)	The tivizen is currently booting. When the booting is completed, it stays solid. (this takes about 20 seconds)
Green (solid on)	The system operates normally.

Red (solid on)	There is bad reception of Live TV signal or no available Live TV signal in your place. tivizen does not work properly.

⑥ **Wi-Fi Indicator**

It informs you of the status of Wi-Fi connection and data transfer.

LED Indication	Description
OFF	The system is turned off.
Green (solid on)	Ready to transfer broadcasting data.
Green (blinking)	Currently transferring broadcasting data.

Attaching the Power Plug Adaptor

After unpacking, attach the power plug adaptor by turning it right on the back of the tivizen body unit.

To detach the power plug adaptor from the tivizen, turn the power plug adaptor left while you press the button on the tivizen body unit as shown in the picture.

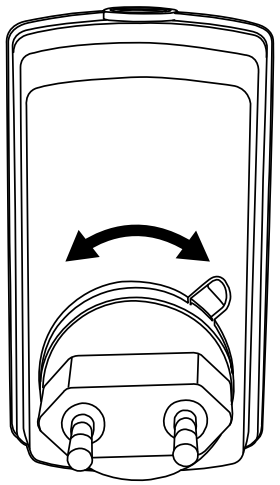

Let's Get Started

① Download and install the "**tivizen DVB-T Wi-Fi**" app on your device.

② Connect your roof-top or external antenna on the tivizen's antenna connector.

③ Plug the tivizen into wall outlet.

④ Switch on POWER to turn on the tivizen.
Wait until the status and Wi-Fi indicator flashes in green.

⑤ Connect tivizen via Wi-Fi with your device.
Turn on the Wi-Fi and select the tivizen SSID on your device.

* SSID is displayed in the format of "tivizenIPLUG xxxxx".

⑥ Run the app.

⑦ Select your country and scan for available channels.

⑧ Choose a program, use the EPG or record your favorite TV show.

Product Disposal

Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to their instructions.
Do not Short circuit, disassemble or expose the battery to fire or water.
Keep battery out of the reach of children.

Disposal and Recycling Information

When this product reaches its end of life, please dispose of it according to your local environmental laws and guidelines.

European Union-Disposal Information

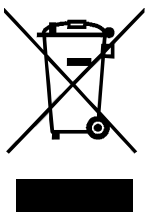

The symbol means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

CE 1177 ⓘ RoHS

For indoor use only

Warranty

This product is manufactured and shipped under strict quality control and tests. The Company guarantees the product as below: If you encounter a problem or product failure, carry the purchase receipt and warranty card with you and contact the retailer for service repair.
(If this is not available, contact the nearest customer center.)

Product Name	tivizen iPlug Wi-Fi
Model Name	iPG-T10
Serial No.	
Purchase Date	MM DD YY
Name	
Telephone	
Address	
Retailer	
Call Center	
Manufacturer	icube Corp.

■ Warranty Period

Main Unit: one (1) year from the date of purchase

- You must carry and present the purchase receipt and warranty card to the retailer or customer center if you want to repair the product by the warranty.
- If the purchase date is not confirmed, we calculate the warranty period based on the initial shipment date.

■ **Free of charge**

You can get free-of-charge service repair if you encounter a problem in normal use conditions within the warranty period.

■ **Chargeable**

Service repair will not be free of charge, if the warranty period expires, or if the problem is considered chargeable even within the warranty period.

1. Mistake by the customer
- If the customer dismantled or modified the product at will, or if the problem is caused by a customer mistake (fall, getting wet, etc)
- Intentional or unintentional mistake by the customer
- If the problem is caused by a technician who is not certified by the manufacturer or customer center
- If the problem is caused by a failure of the connected device to the product (charger, etc)
- If the problem is caused by a broken antenna (A broken antenna is applicable to chargeable service)
- If the problem is caused by use of consumables or accessories that are not specified by the Company
- If the problem is caused by an error of the power source itself

2. Natural disaster (fire, flood, salt damage, lightning stroke, etc)
3. If an expendable part expires (connection terminals, labels, etc)
4. If the problem is caused by non-compliance with the "Cautions" section of the user manual
5. A request for service repair will charge you with service fee if the product is found not defective.

■ When purchasing the product, fill the purchase date and retailer name in the warranty card and be sure to get signature of the retailer.